TUTOR

DESIGNED BY Yong Slater JAN 2005

N.B. IF YOU USE OTHER MATERIALS THAN THOSE SHOWN ON THE PLAN AND THE KITE DOES NOT FLY RIGHT, BLAME YOURSELF NOT THE DESIGNER!

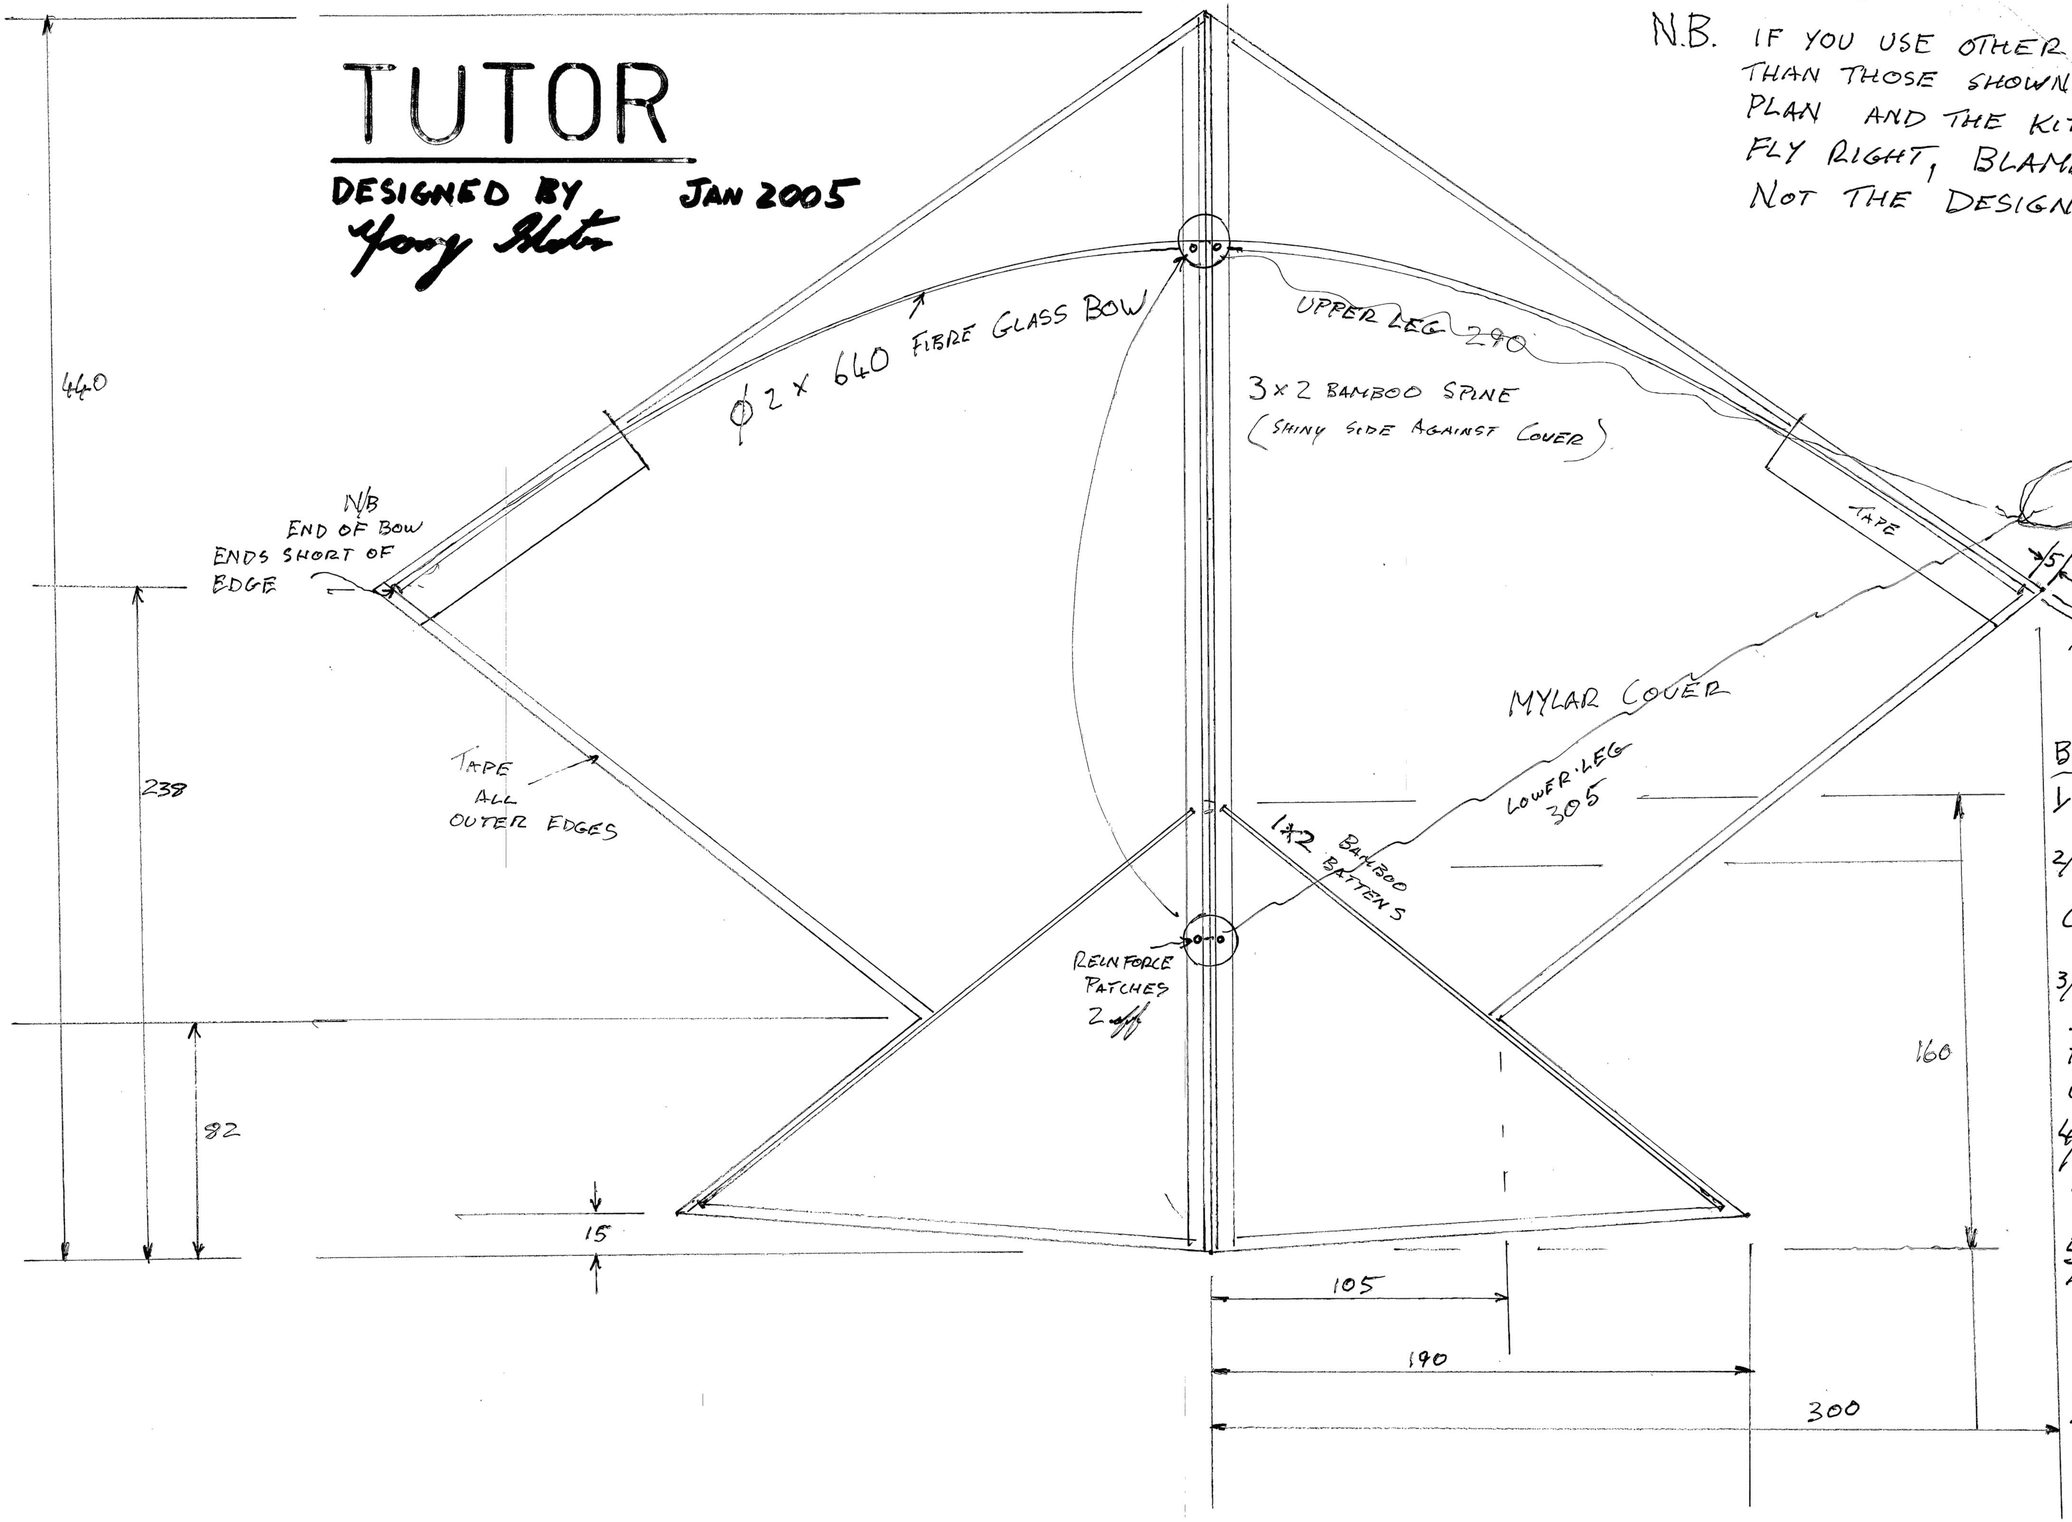

BUILDING SEQUENCE

1/ TAPE COVER MATERIAL TO BUILDING BOARD

2/ MARK OUT OUTLINES AND TAPE EDGES (DIAMOND TAPE, POLY PROPELENE) VINYL NOT SELLOTAPE

3/ POSITION SPINE (USE PRITT STICK POWER) THEN TAPE. ADD REINFORED PATCHES. FIX BATTENS (GLUE AND TAPE)

4/ POSITION BOW WITH TAPE NB. BOW DOS'NT GO RIGHT TO EDGES SEE PLAN

5/ CUT OUT OUTLINE OF FIGHTER. PUT SOME MORE TAPE ROUND ENDS OF BOW.

6/ BRIDLE AND FLY!